



Fitted Bedspread or Coverlet

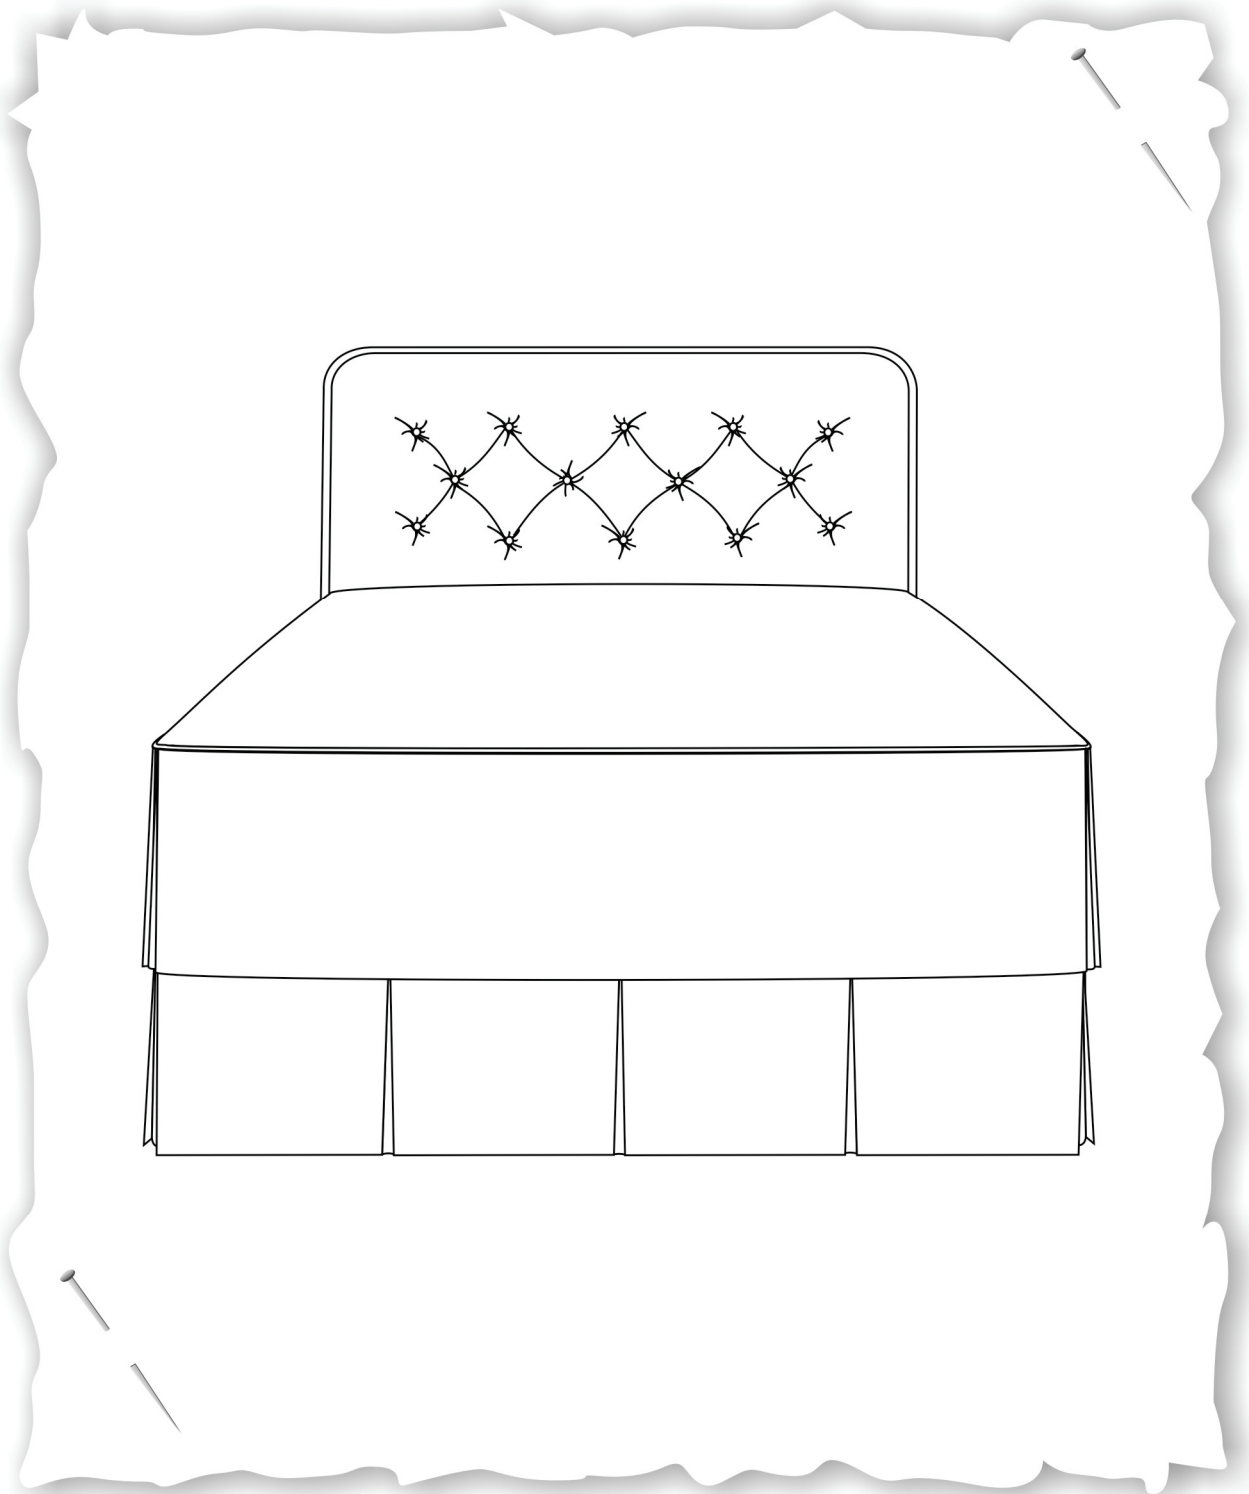

FITTED BEDSPREAD OR COVERLET

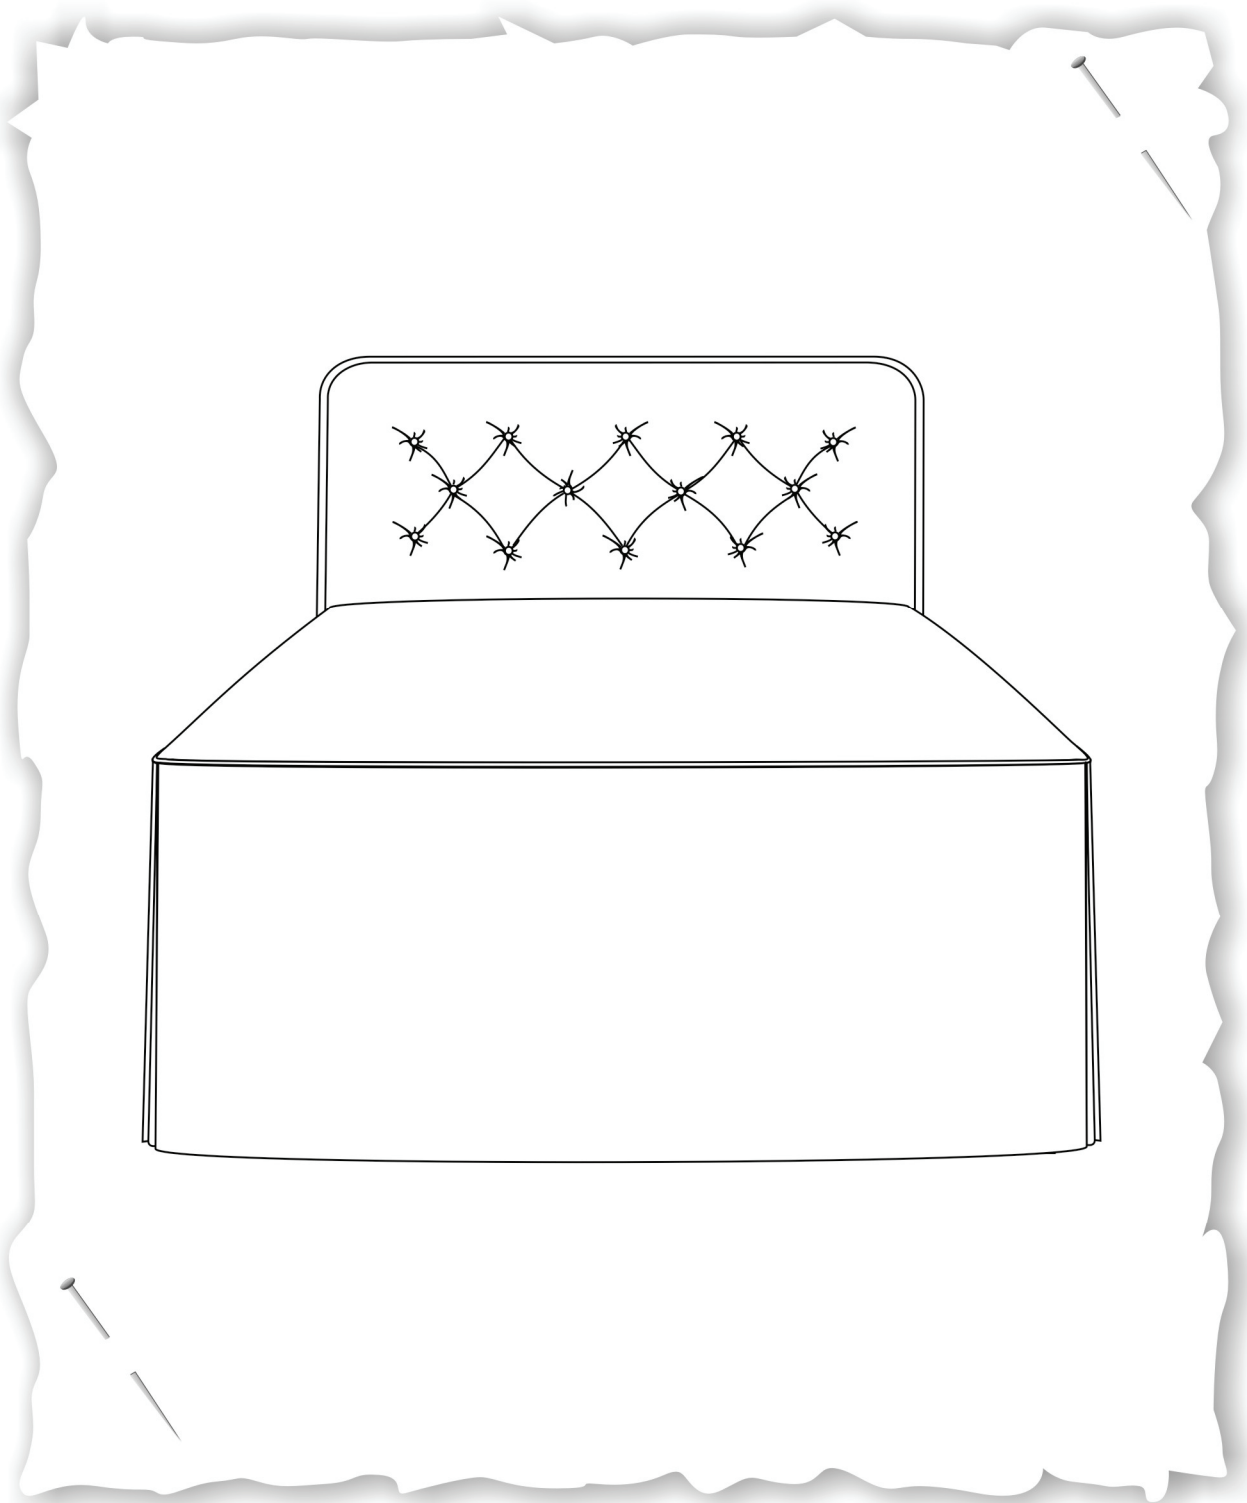

FITTED BEDSPREAD OR COVERLET


- ✓ Spread is usually lined & interlined. When using upholstery weight fabric, interlining can be omitted.
- ✓ There is a seam around mattress edge. Piping can be added in seam at mattress edge.
- ✓ Fitted bedspreads or coverlet usually has gussets.
- ✓ When fabricating a spread with a dark color fabric, consider changing thread on serger.

1.	<p>Yardage:</p> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th style="width: 25%;">Size</th> <th style="width: 25%;">Solid Fabric Yds</th> <th style="width: 25%;">27" Repeat Fabric Yds</th> <th style="width: 25%;">Trim Yds</th> </tr> </thead> <tbody> <tr> <td>Twin</td> <td>9.00</td> <td>9.00</td> <td>6.00</td> </tr> <tr> <td>Full/Queen</td> <td>11.00</td> <td>12.00</td> <td>7.00</td> </tr> <tr> <td>King</td> <td>11.00</td> <td>12.00</td> <td>7.50</td> </tr> </tbody> </table>	Size	Solid Fabric Yds	27" Repeat Fabric Yds	Trim Yds	Twin	9.00	9.00	6.00	Full/Queen	11.00	12.00	7.00	King	11.00	12.00	7.50
Size	Solid Fabric Yds	27" Repeat Fabric Yds	Trim Yds														
Twin	9.00	9.00	6.00														
Full/Queen	11.00	12.00	7.00														
King	11.00	12.00	7.50														
2.	<p>Face fabric cuts:</p> <ol style="list-style-type: none"> 1. Before cutting, steam press entire piece to reduce shrinkage. 2. Two widths of fabric are required for most coverlets (<i>top & sides</i>). Three widths are required for most bedspreads. 3. Side cuts will be longer: length of top plus wrap around corner plus side hem at foot. 4. Tip: Consider adding 1/2" - 3/4" to drop to allow for thick blankets. 5. When using readymade cord around mattress see step 6. 6. ***Use Figure from side piece width for fabric cuts. Excess will be cut off top piece in step 4. <p>Top Section: Width: Width of mattress + 1" = _____ <i>Formula: W of mattress, plus 1" (seams)</i> Length: Length of mattress + 3" + 1" + 1/2" = _____ <i>Formula: L of mattress, plus 3" (top hem), plus 1" (extra allowance at head of bed), plus 1/2" (bottom seam)</i></p> <p>Side Sections: (<i>Cut two side sections</i>) Width: Length of mattress + 6" + 1" + 3/4" = _____ <i>Formula: Length of mattress, plus 6" (side hems), plus 1" (extra allowance at head of bed), plus 3/4" (wrap around)</i> Drop: Drop + 3 + 1/2 = _____ (<i>one side/drop</i>) <i>Formula: Drop, plus 3" (bottom hem), plus 1/2" (seam)</i></p> <p>End Section: Width: Width of mattress + 6" + 1 1/2" = _____ <i>Formula: Width of mattress, plus 6" (side hems), plus 1 1/2" (wrap around for both corners - 3/4 on each side)</i> Drop: Drop + 3" + 1/2" = _____ <i>Formula: Drop, plus 3" (bottom hem), plus 1/2" (seam)</i></p>																
3.	<p>Lining & Interlining cuts:</p> <ol style="list-style-type: none"> 1. Before cutting, steam press entire piece to reduce shrinkage. 2. It is best to cut interlining & let it rest 24 hours before fabricating. (<i>see Quick Tips – Interlining</i>) <p>Top: Cut top pieces of lining & interlining same as face fabric.</p> <p>Sides: Face fabric cut - 6" = _____ <i>Formula: Same cut width as face fabric cuts, minus 6" (side hems)</i></p> <p>End: Face fabric cut - 3" = _____ <i>Formula: Same cut length as face fabric, minus 3" (bottom hem)</i></p>																


4.

Fabrication:

1. Cut all fabrics according to cut information above.
2. Split one width of face fabric & sew 1/2 width on each side of full width. Whole width will be in center. *(Bedspreads will not have a split panel.)*
3. Cut top piece to **correct width** cutting on 1st mark. *(see dia. 1)* *(Excess on each side will be used when fabricating side pieces.)*
4. Cut top piece only to **correct length** cutting on 2nd mark. *(see dia. 2)* **Do not cut across width of top piece until width has been cut off. Dotted lines represent top piece.**

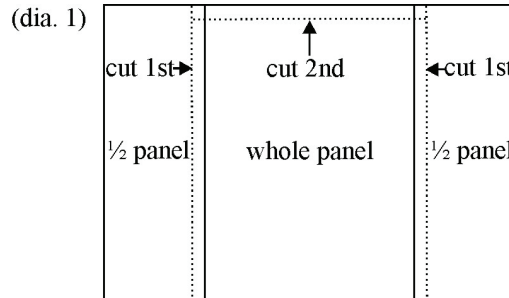




5. Round corners at bottom. *(see dia. 2)* *(see Quick Tips – Workroom)*
6. Repeat steps for lining & interlining top piece.

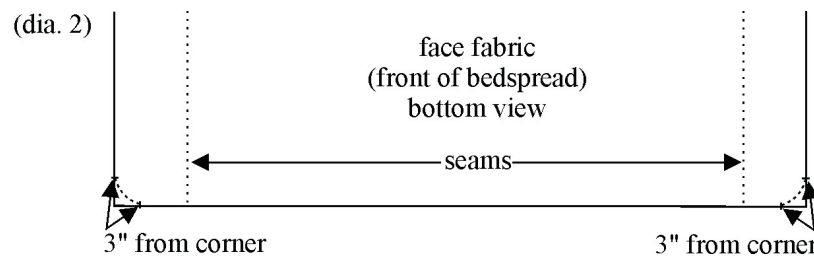

5.

Sides & end:

1. Sides & end; lay face fabric face side down > place interlining on top of face fabric > place lining right side up on top of interlining.
2. Fold up & press 1 1/2" bottom hem & side hems on end piece. *(see dia. 3)*
3. Fold in & press 1 1/2" bottom hems & one side hem on each side piece. Do not hem side that will be at head of bed; this will be hemmed later. *(see dia. 4 & 5)*
4. Trim interlining & lining at press marks.
5. Hem bottom hems.
6. Hem side hems.
7. Serge top edges.

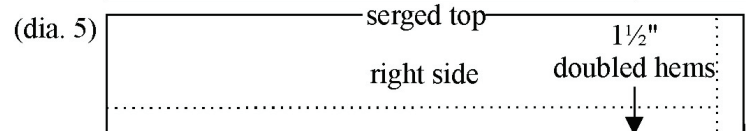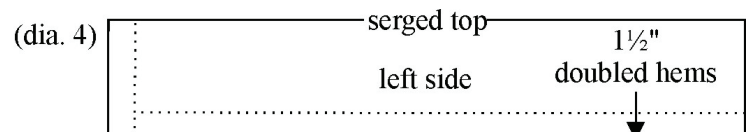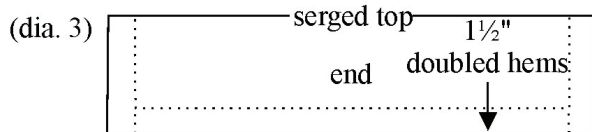


6. **Top:**
1. Press seams of lining, interlining & face fabric. (*Pull seams while pressing.*)
 2. Place face fabric face side down on table > place interlining on top of face fabric > stay stitch/glue baste around edges of the face fabric & interlining only.
 3. When piping|cording is required, sew it on at this time. Note: Make sure piping|cording does not pucker top piece.

Piping option:

1. Cover cord at this time. (*see How To's – Piping/Covering*)
2. Attach piping to top piece. Leave 1" of extra piping at top on each side.
3. Pull cord out of piping casing > cut 4" of cord on each sides > smooth casing. (*see dia. 6*)
4. Cut piping casing even with fabric top.

Readymade cord option:


1. Readymade cord will be cut even with FL of top. (*Banding will be used to reduce bulk of readymade cord*)
2. Sew a facing band across entire top after sides have been attached.
3. Banding strips should be cut 4"; cut 2½" from length.
4. Serge across top edge.

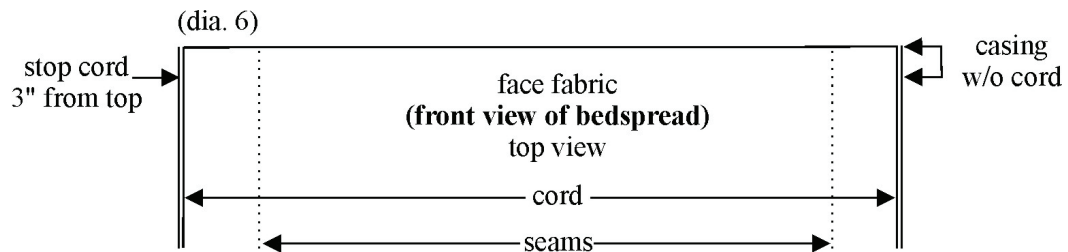

7. **Gussets:**

Width: Top 5" | Bottom 9" (*see dia. 7*)

Length: Drop - ½" = _____
Formula: Drop, minus ½".


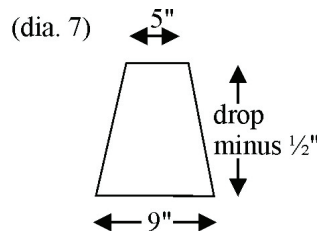


1. Self-line gussets. (*Interlining can be added to gussets.*)
2. With right side together sew sides & bottom; leaving top open. Gussets are pillowcased.
3. Turn & press.

8. **Fabrication:**

1. With right sides together, attach side pieces to top piece. (*see dia. 8*) (*Side pieces will wrap around rounded corner about ¾".*)
2. With right sides together, sew on end piece. (*see dia. 8*) (*End piece will wrap around each corner about ¾".*)
3. Attach gussets to rounded corners of spread. (*see dia. 9*)
4. With spread facing up; fold in sides, end & gussets toward center. (*see dia. 9*)

Fabrication (*continued*):

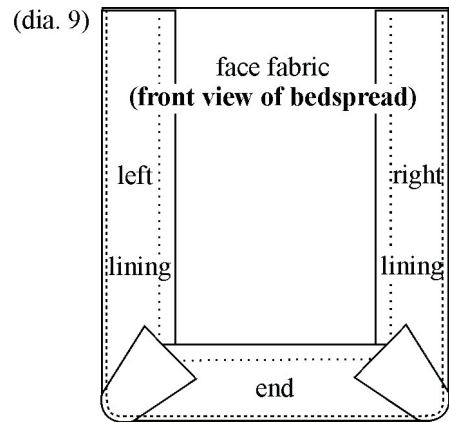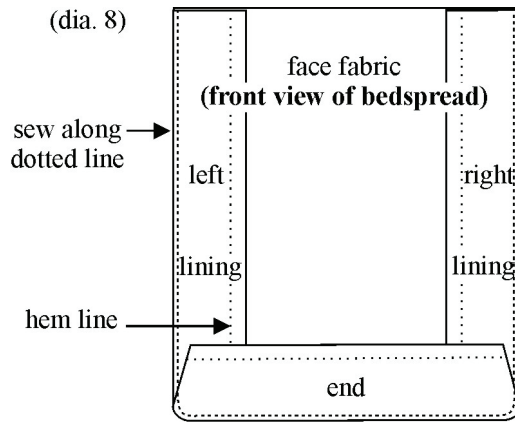

5. Lay lining wrong side up on top of spread > pin.
6. When piping is along mattress edge, use zipper foot to stitch close to cording around sides & bottom. This stitching will cover all previous stitch lines. Stitch on backside of face fabric. (*Leave top open to turn spread.*)
7. Turn spread.
8. Press doubled 1½" hem on top piece & side pieces.
9. Straight stitch across top hem to reinforce hem due to stress caused when making bed.
10. **Note:** All edges should be finished. (*There will be no raw edges.*)